




PROFESSIONAL PUBLIC ADDRESS SYSTEM

MIXER PRE-AMPLIFIER

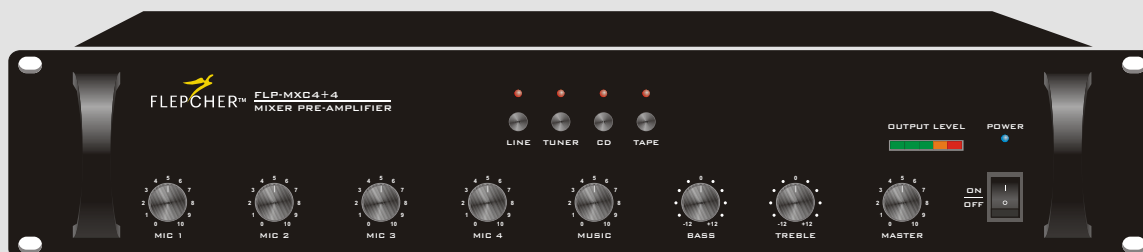

● **FLP-MXC4+4**

OPERATION MANUAL

Please follow the instructions in this manual to obtain the optimum results from this unit.
We also recommend that you keep this manual handy for future reference.

1. SAFETY PRECAUTIONS	3
2. GENERAL DESCRIPTION	5
3. FEATURES	5
4. NOMENCLATURE AND FUNCTIONS	
4.1 Front Panel	6
4.2 Rear Panel.....	7
5. CONNECTIONS.....	8
6. APPLICATIONS	9
7.SPECIFICATIONS	10
8.DIMENSIONAL DIAGRAM	11

1. SAFETY PRECAUTIONS

- Be sure to read the instructions in this section carefully before use.
- Make sure to observe the instructions in this manual as the conventions of safety symbols and messages regarded as very important precautions are included.
- We also recommend you keep this instruction manual handy for future reference.

Safety Symbol and Message Conventions

Safety symbols and messages described below are used in this manual to prevent bodily injury and property damage which could result from mishandling. Before operating your product, read this manual first and understand the safety symbols and messages so you are thoroughly aware of the potential safety



WARNING

Indicates a potentially hazardous situation which, if mishandled, could result in death or serious personal injury.



CAUTION

Indicates a potentially hazardous situation which, if mishandled, could result in moderate or minor personal injury, and/or property damage.



WARNING

When Installing the Unit

- Do not expose the unit to rain or an environment where it may be splashed by water or other liquids, as doing so may result in fire or electric shock.
- Use the unit only with the voltage specified on the unit. Using a voltage higher than that which is specified may result in fire or electric shock.
- Do not cut, kink, otherwise damage nor modify the power supply cord. In addition, avoid using the power cord in close proximity to heaters, and never place heavy objects -- including the unit itself -- on the power cord, as doing so may result in fire or electric shock.
- Be sure to replace the unit's terminal cover after connection completion. Because high voltage is applied to the speaker terminals, never touch these terminals to avoid electric shock.
- Be sure to ground to the safety ground (earth) terminal to avoid electric shock. Never ground to a gas pipe as a catastrophic disaster may result.
- Avoid installing or mounting the unit in unstable locations, such as on a rickety table or a slanted surface. Doing so may result in the unit falling down, causing personal injury and/or property damage.

When the Unit is in Use

- Should the following irregularity be found during use, immediately switch off the power, disconnect the power supply plug from the AC outlet and contact your nearest **FLEPCHER** dealer. Make no further attempt to operate the unit in this condition as this may cause fire or electric shock.
 - If you detect smoke or a strange smell coming from the unit.
 - If water or any metallic object gets into the unit
 - If the unit falls, or the unit case breaks
 - If the power supply cord is damaged (exposure of the core, disconnection, etc.)
 - If it is malfunctioning (no tone sounds.)
- To prevent a fire or electric shock, never open nor remove the unit case as there are high voltage components inside the unit. Refer all servicing to your nearest **FLEPCHER** dealer.
- Do not place cups, bowls, or other containers of liquid or metallic objects on top of the unit. If they accidentally spill into the unit, this may cause a fire or electric shock.
- Do not insert nor drop metallic objects or flammable materials in the ventilation slots of the unit's cover, as this may result in fire or electric shock.

1. SAFETY PRECAUTIONS

CAUTION

When Installing the Unit

- Never plug in nor remove the power supply plug with wet hands, as doing so may cause electric shock.
- When unplugging the power supply cord, be sure to grasp the power supply plug; never pull on the cord itself. Operating the unit with a damaged power supply cord may cause a fire or electric shock.
- When moving the unit, be sure to remove its power supply cord from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the power cord, resulting in fire or electric shock. When removing the power cord, be sure to hold its plug to pull.
- Do not block the ventilation slots in the unit's cover. Doing so may cause heat to build up inside the unit and result in fire.
- Avoid installing the unit in humid or dusty locations, in locations exposed to the direct sunlight, near the heaters, or in locations generating sooty smoke or steam as doing otherwise may result in fire or electric shock.

When the Unit is in Use

- Do not place heavy objects on the unit as this may cause it to fall or break which may result in personal injury and/or property damage. In addition, the object itself may fall off and cause injury and/or damage.
- Make sure that the volume control is set to minimum position before power is switched on. Loud noise produced at high volume when power is switched on can impair hearing.
- Do not operate the unit for an extended period of time with the sound distorting. This is an indication of a malfunction, which in turn can cause heat to generate and result in a fire.
- Contact your **FLEPCHER** dealer as to the cleaning. If dust is allowed to accumulate in the unit over a long period of time, a fire or damage to the unit may result.
- If dust accumulates on the power supply plug or in the wall AC outlet, a fire may result. Clean it periodically. In addition, insert the plug in the wall outlet securely.
- Switch off the power, and unplug the power supply plug from the AC outlet for safety purposes when cleaning or leaving the unit unused for 10 days or more. Doing otherwise may cause a fire or electric shock.

An all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

2. GENERAL DESCRIPTION

FLEPCHER series of public address mixer amplifiers have power ratings 20W watts RMS, these sleek, attractive units provide a compact solution for PA system amplification and distribution.

3. FEATURES

Four MIC input

Individual gain controls for IMC.

Master volume control.


Bass and treble tone controls.

24V DC interface.

4 balanced XLR mic input with selectable priority and each with phantom power.

4. NOMENCLATURE AND FUNCTIONS

4.1 FRONT PANEL

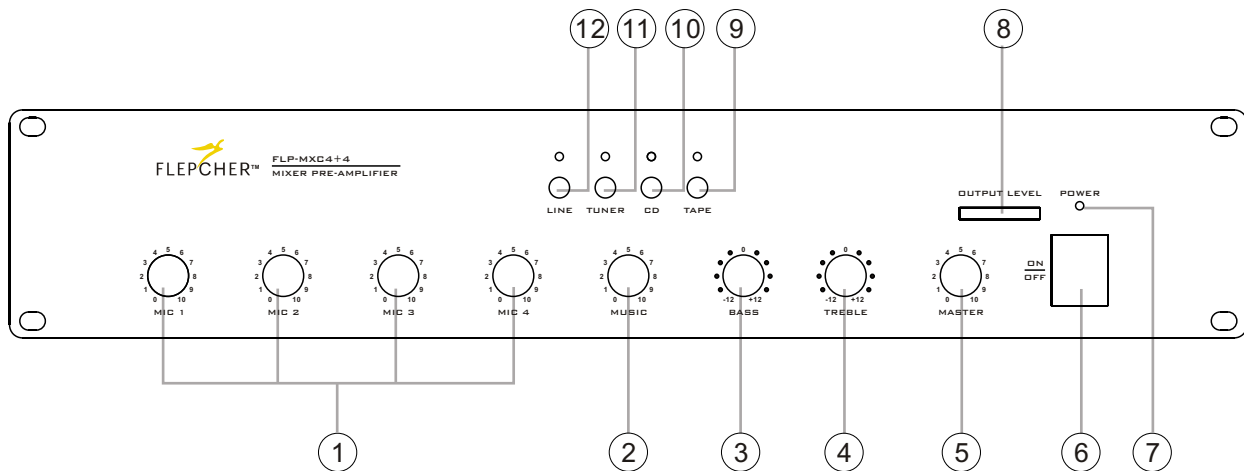

1. MIC1 \ MIC2 \ MIC3 \ MIC4

MIC volume control (MIC1/MIC2/MIC3/MIC4)

2. MUSIC

Music volume control

3. BASS

Adjust bass response. Rotate clockwise to increase bass output and anticlockwise to reduce it.

4. TREBLE

Adjust treble response. Rotate clockwise to increase treble output and anticlockwise to reduce it.

5. MASTER

Master volume control

6. POWER SWITCH

On top of the opening Power

Press the end, power shut down

7. POWER

Power indicator

8. OUTPUT LEVEL

Power level indicator

9. TAPE

Select tape channel input keyswitch

10. CD

Select CD channel input keyswitch


11. TUNER

Select tuner channel input keyswitch

12. LINE

Select line channel input keyswitch

4.2 REAR PANEL

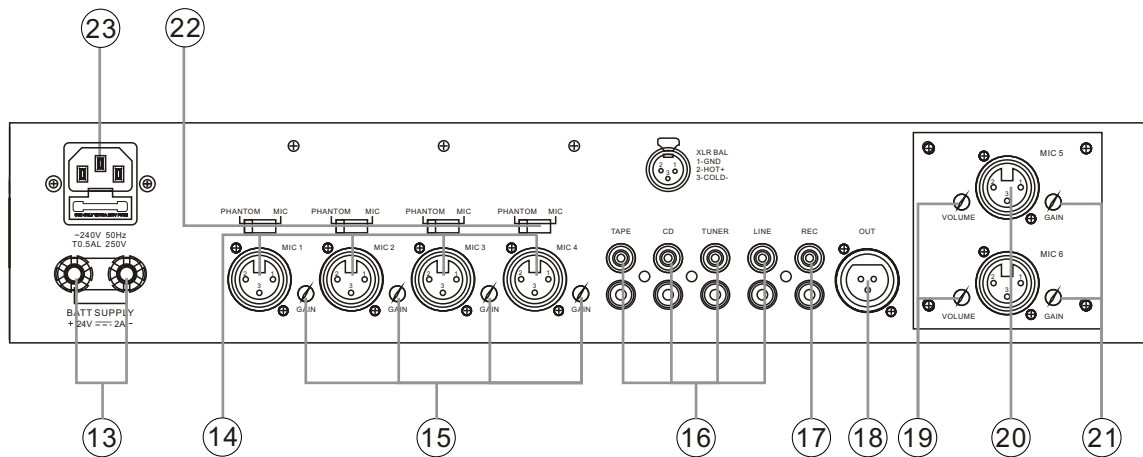

13. 24V DC BATT SUPPLY

14. MIC(1~4)

MICRO(1~4)microphone input

15. GAIN

MICRO(1~4) microphone gain control

16. LINE

Audio source interface

17. REC

To recorder interface

18. OUT

Balanced Audio output

19. MIC(5~6)

MICRO(5~6) microphone volume control

20. MIC(5~6)

MICRO(5~6)microphone input

21. GAIN

MICRO(5~6) microphone gain control

22. PHANTOM POWER

MIC(1~4) phantom power select switch

23. ~240V/50Hz AC power input


NOTE:

Mute function: MIC1 has the mute function to MIC2~4, MIC5~6, all the line input;
MIC2~4 has the mute function to MIC5~6, all the line input;
MIC5~6 and all of the line input at the same level;

5. CONNECTIONS


XLR CONNECTIONS

1. INPUT CONNECTION XLR

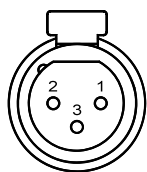


1 = GND
2 = HOT
3 = COLD

2. INPUT CONNECTION RCA

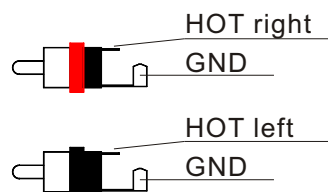

6. APPLICATIONS

REAR PANEL CONNECTIONS

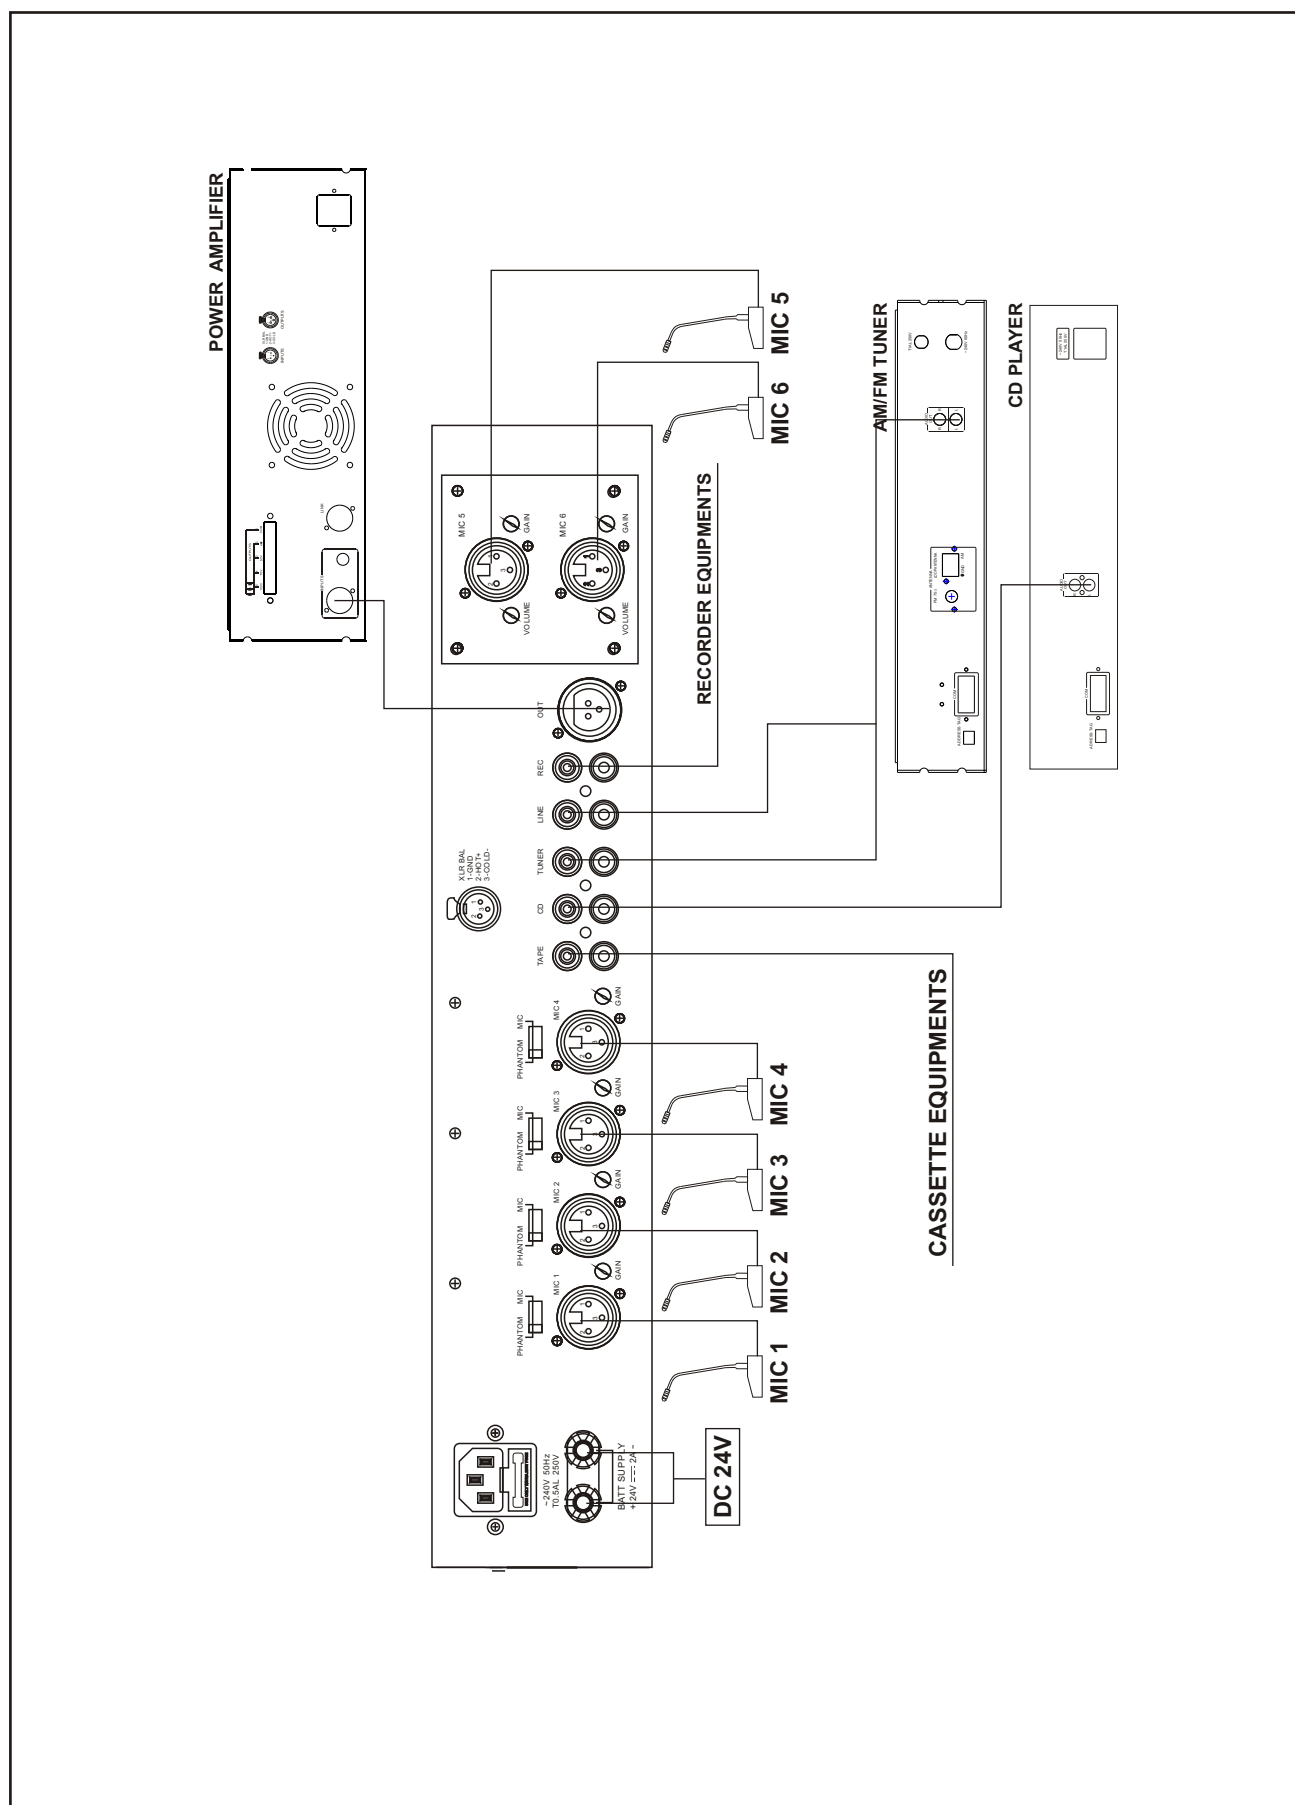


7. SPECIFICATIONS

MIXER AMPLIFIER	
MODEL	FLP-MXC4+4
4 MICROPHONE INPUTS	XLR Balanced with phantom power
SENSITIVITY	-50 /-2dB, 2.5mV / 500 mV
SIGNAL TO NOISE RATIO	>68 dB
FREQUENCY RESPONSE	40 / 17.000 Hz (-3 dB)
PHANTOM POWER	+48 V
4 AUXILIARY INPUTS	
TUNER AND TAPE INPUTS SENSITIVITY/IMPEDANCE	200 mV / 47 K Ω
CD AND LINE INPUTS SENSITIVITY/IMPEDANCE	500 mV / 47 K Ω
SIGNAL TO NOISE RATIO	90 dB
FREQUENCY RESPONSE	40/20.000Hz (-3 dB)
CONTROL	
BASS	± 12 dB
TREBLE	± 12 dB
OUTPUTS	
POWER CONSUMPTION	20W
OUTPUT ELECTRO/IMPEDANCE	775 mV / 47K Ω
OUTPUT REC/IMPEDANCE	200 mV / 1K Ω
DISTORTION	< 1%
OPERATING CONDITION	
AC MAINS INPUT	240V A C 50Hz, 24V DC(optional)
DIMENSIONS (D X W X H)mm	484X370X88
WEIGHT	4.5Kg

8. DIMENSIONAL DIAGRAM

UNIT:mm

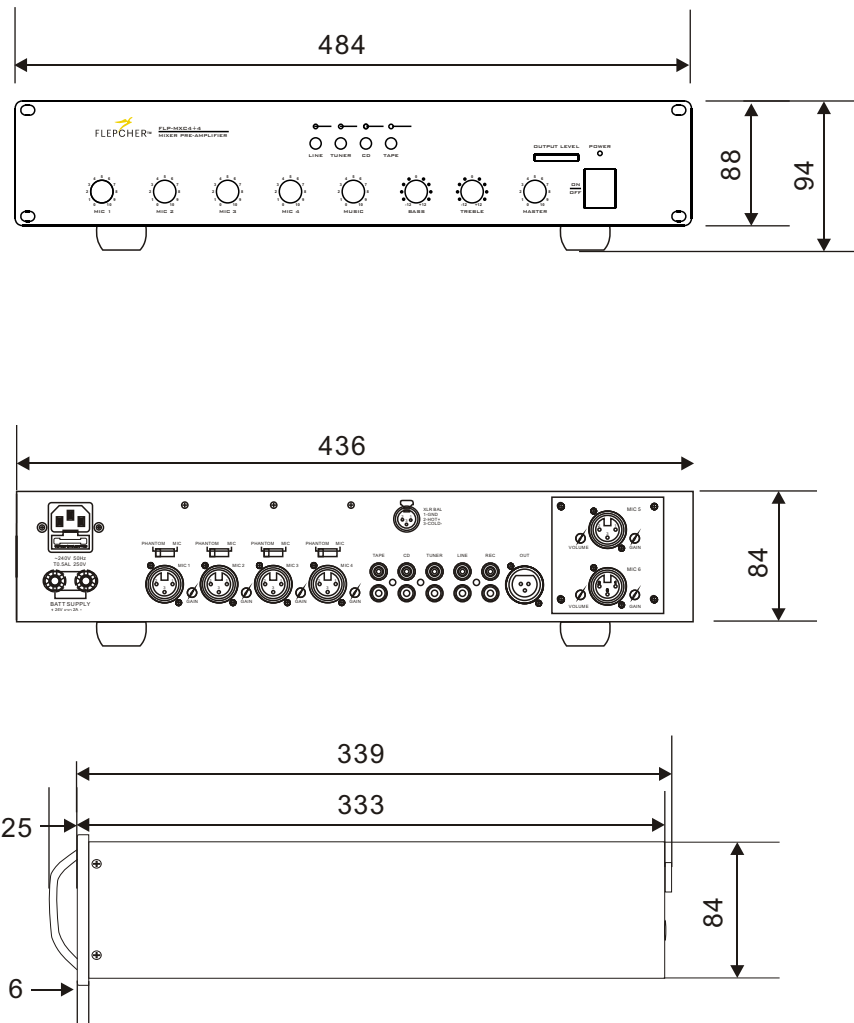

Keep the unit's all sides over 10 cm away from objects that may obstruct air flow to prevent the unit's internal temperature rise.

UNIT:mm

